

KEY:
 LP = LEFT Panel
 BP = BACK Panel
 RP = RIGHT Panel
 FP = FRONT Panel
 SL = Stand Legs
 R = Roof
 G = Grille
 T = Tray
 S = Shelf

HARDWARE INCLUDED:
 Thin Hex Screw 3/16" diam. x 1 1/4" L 4 pieces (+2 extra)
 Thick Hex Screw 3/8" diam. x 1 1/4" L 12 pieces (+2 extra)
 Hex Key

1 PIECES

SI 1, SI 2, S

Interchangeable

Turn the unit over and add the casters. With straight downward pressure, insert the post of the caster fully into the leg.

2 PIECES

LP1, RP1, BP1, FP1

Interchangeable

Hand-tighten all screws for Steps 2 through 4.

1 Rest the front panel (with wind-bell lock) on the grille/tray tracks, aligned with the corners.
 2 Holding the front panel in place, add the left side panel, aligning the bracket with the corner, and extended wires with frame holes.
 3 Hand-tighten a thick hex screw into the aligned holes to hold the panels and base together.

NOTE: Lower side panels have holes on the top of the frame.

3

These parts are interchangeable:
 SI 1 = SI 2
 Lp1 = Rp1
 Lp2 = Rp2

4

R

Add the roof panel. Guide the front and back panels into the channels on the underside of the frame rails on the roof panel. Align the extended wires into the corresponding holes along the side frames. Check that the extended wires from the front and back panels have not slipped out of their corresponding holes. Hand-tighten screws into each corner.

5

PERCHES, CUPS

Open the front doors. Add the perches at various positions throughout the cage. Insert the slotted perch ends onto vertical wires, resting on a horizontal wire.

Avoid placing perches on wires which will impede operation of the cup doors.

Rotate the windbell lock up and slide the grille into the upper channels. Slide the tray into the lower channels.

6

G, T

Carefully hold the snap-hinge cup doors open. Hook the cups on the horizontal wire along the bottom edge of the opening. Do not place the cup where the hooks may impede the operation of the snap-hinge or door closing.

Assembly completed. {

Art.No. 110227 + 110393

Page 1

2 continued...

Add the right side panel and then the back panel, hand-tightening screws into each bottom corner. Confirm that all extended wires on the panels are inserted into their corresponding holes along the frames in all places.

3

LP2, RP2, BP2, FP2

Interchangeable

1 Guide the top of the lower panel between the channels along the bottom edge of the upper front panel.
 2 Holding the upper front panel in place, add the upper left side panel, aligning the bracket with the corner, and extended wires with frame holes.
 3 Hand-tighten a thick hex screw into the aligned holes to hold the panels together.

Door opens out. Thin vertical wires face the interior.

Add the upper right side panel and then the upper back panel, hand-tightening screws into each bottom corner. Confirm that all extended wires on the panels are inserted into their corresponding holes along the frames in all places.

BACK PANEL: Thin vertical wires face the interior.

4

R

Add the roof panel. Guide the front and back panels into the channels on the underside of the frame rails on the roof panel. Align the extended wires into the corresponding holes along the side frames. Check that the extended wires from the front and back panels have not slipped out of their corresponding holes. Hand-tighten screws into each corner.

5

PERCHES, CUPS

Open the front doors. Add the perches at various positions throughout the cage. Insert the slotted perch ends onto vertical wires, resting on a horizontal wire.

Avoid placing perches on wires which will impede operation of the cup doors.

Rotate the windbell lock up and slide the grille into the upper channels. Slide the tray into the lower channels.

Carefully hold the snap-hinge cup doors open. Hook the cups on the horizontal wire along the bottom edge of the opening. Do not place the cup where the hooks may impede the operation of the snap-hinge or door closing.

Assembly completed. {