




210093 Assembly Instructions

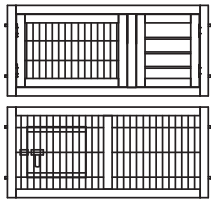


1x top and bottom front panel

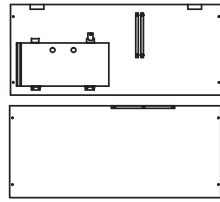


1x top and bottom back panel




1x left panel



1x right panel




1x roof



1x tray



1x partition



1x ramp



M3. 5X45
8+1




M3. 5X30
8+1



M3. 0X16
12+1




M3. 0X14
12+1




2 x metal latch




1 x hinge

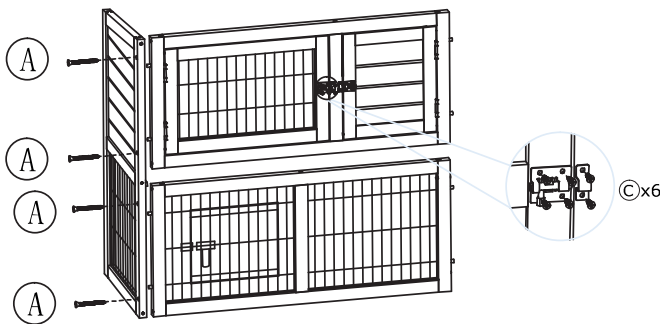


1. Fix the left panel, top and bottom front panel.

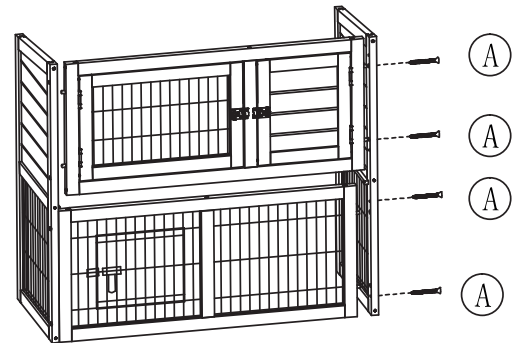


2. Fix the right panel.

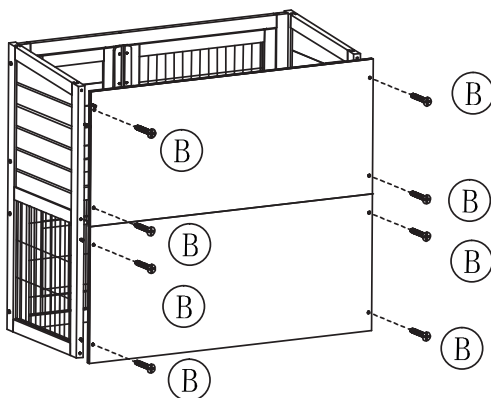


3. Fix the top and bottom back panel.

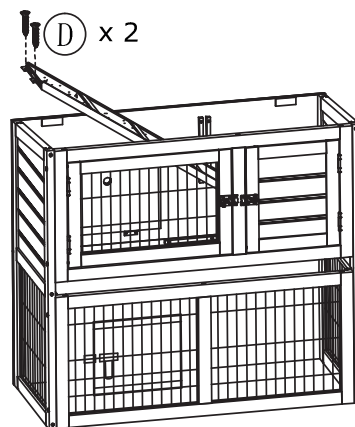


4. Insert the ramp.

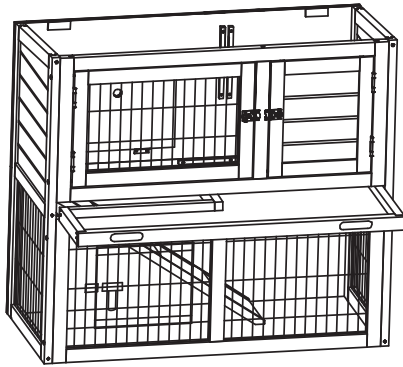


5. Insert the tray.

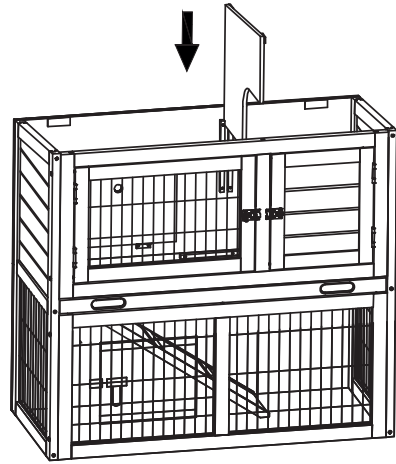


6. Insert the partition.

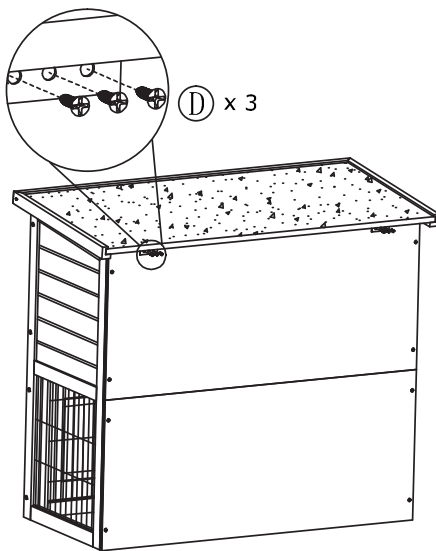

7. Fix the roof.

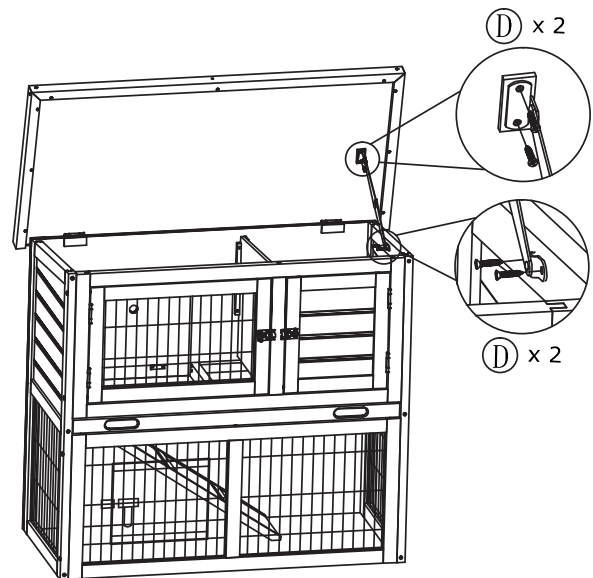

8. Fix the hinge.

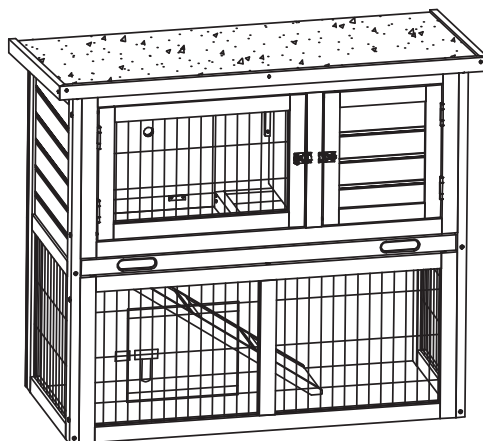

9. Finish.